# 安装说明书

# TOTO

铜合金壁式单柄双控暗装水嘴面板

# TBP02301型 TBP02302型

为了能够发挥产品功能,请细读本安装说明书的内容,并正确地安装。安装后,请务必向客户仔细地说明使用方法。

使用前,务请细读本「安全上的注意事项」的内容,并正确地安装。		▲ 注意	
<ul> <li>为了安全,正确地使用本产品,确保使用者或他人免危害或财产损失,本说明书内使用各种标志。</li> <li>各标志与含义如下:</li> <li>整告无视本标识错误使用时,可能会导致/的死亡或重伤。</li> </ul>	分、说明。	<b>○</b> 禁止	不要施加强力或冲击。 否则可能会造成破损,以及因发生漏水而造成的家具浸湿等财产损 请勿在室外或可能结冰的地方使用。
▲ 注意 无视本标识错误使用时,可能会导致受伤或损坏物品     ● ● 表示必须 "强制"实行的内容。左图表示 "必须实行"。		の必须实行	否则可能会造成破损,以及因发生漏水而造成的家具浸湿等财产损 清扫滤网时,必须关闭配管部的总开关后进行。 另外,必须确认供热水侧滤网为冷却状态。 否则会因流出高温热水造成烫伤以及发生漏水而造成弄湿家具等损 产。
冷热水管请勿装反。 否则可能因使用冷水侧时吐热水而造成烫伤。 供热水温度不得超过90℃,建议供热水温度为60℃.供热水管请勿			
使用蒸汽。 禁止 否则可能会造成产品使用寿命缩短 弄湿家具等财产损失。	、损坏、烫伤以及因发生漏水而造成		
修理和改造。	明书记载检修项目外的产品拆解、 受伤 , 或因漏水而引起家具浸湿等财		









2mm

以内

防水胶

冲洗盖

密封圈







# Installation Manual

# TOTO **Concealed Mixing valve**

# TBP02301\* TBP02302\*

Install the product according to this Installation Manual so that the product fulfills its function. When the installation is over, fully explain how to use the single handle faucet to the customer.

Safety Precautions (Be sure to follow all precautions for safety sake.) Please read these Safety Precautions before installation work in order to install the product properly. This manual employs various indications in order to install •The contents you must observe are

the product properly and to prevent harm to the customer and other people, as well as damage to their properties. The indications and meanings are as follows:

This indication means that if the content in the column of this indication is ignored or handled wrongly, death or serious injury may occur. This indication means that if the content in the column of this indication is ignored or handled wrongly, injury or property damage may occur.

classified into the following symbols; their meanings are explained. igvee Indicates things that you



must do without fail as "Mandatory". The left figure indicates to "Execute it without fail"

# 

Do not connect the cold water pipe and the hot water pipe reversely.

Even if you try to turn on the cold water, the hot water comes out and may scald you.

#### Do not use supply water at a temperature higher than 90°C.

If you use the water at a temperature higher than 90°C, the water may scald you and the life of the faucet may shorten causing it to break and leak water that may wet household articles and cause damage to your property.



Do not disassemble or remodel the product with other items than what are described in this manual.

Otherwise, the water may scald or injure you and the product may break and **Disassembly** leak water that may wet household articles and cause damage to your property. Prohibited

### 

Do not subject the product to strong force or impact. Otherwise, the product may break and leak water that may wet

Prohibited

household articles and cause damage to your property. Do not use the product in any place where freezing can be expected.

Otherwise, parts may break and leak water that may wet household articles and cause damage to your property.

When cleaning the filter, be sure to close the main valve at the piping part first. Also, make sure that the filter on hot water side is not so hot.



Hot water at a high temperature may come out and scald you or cause damage to your property due to water leakage.

#### Mandatory Firmly tighten the screws for fixing the functional part.

If a gap is made between the embedded part and the functional part, property damage due to water leakage may occur.



Prohibited

# Use condition and attentions in construction

# Use condition

- 1. Cold water supply\*hot water supply pressure Minimum pressure.....0.05MPa (flow pressure) Maximum pressure.....1.0MPa (static pressure) Recommended Operating pressure.....0.1~0.5MPa (flow pressure) Test pressure.....0.4MPa (static pressure)
- 2. The Temperature for water supply is 4-90°C. Recommended hot water temperature 60°C, Do not use steam to supply hot water.
- 3. The ambient temperature for use is above 0°C. If the ambient temperature is lower than 0°C, the faucets will deform and crack from freezing.
- 4. Being out of use for a long time may result in internal and external rust to the faucets and being unable to be used.
- 5. If you want to scrap this product, do not treat it as you do for general household garbage. Please follow relevant statutes to have it treated, recovered and collected appropriately by an independent recovery system.
- 6. The product in these instructions has a cleaning function.





**Completion Drawing** 





\*This product must be used in an ancillary manner with the TBN01001\*







surface



Protective II.Installation of the main body of faucet O-ring 3. Make the water discharge port of the decorating plate cover 1. Take out the main body of faucet and face down and pass through the spool for installation remove the protective cover. in the lining plate. 2. install the switching part of the main 4. The gap between the decorating plate and the wall body of faucet in the faucet buried in Decorating surface should be kept within 1mm. wall upwards and fasten with screws plate sufficiently.(Have no switching handle knob.the"UP"on the main body is Swithing part Attention concealed in installation toward the Screw In installing the decorating plate, upper side)  $\mathcal{O}$ take care not to scratch the cartridge sleeve. Attention Cartridge ST. sleeve •In removing the protective cover,take •No waterproof adhesive shall be care not to allow the screws to drop appleid on the edge Main body of faucet and get lost.No O-ring shall fall off. of the decorating plate Please use the hex wrench in the because the water product package to fasten the screws Hex wrench discharge port is (opposite side 4mm) Switching for the main body of faucet. Water located under it. •The installation firection of the main discharge port pull rod body of faucet must not be furned upside down.

#### ${\rm I\hspace{-.1em}I}$ .Installation of lining plate and decorating plate

- 1. Put the lining plate on the main body of faucet according to the "UP" direction indication on the lining plate.
- 2. Use screws to secure the lining plate onto the faucet buried in wall

#### Attention

- •Make a pressure resistance inspection bofore installing the lining plate and confirm it the cold and hot water stop cock is safely opened.
- •The water discharge port is located under the lining plate. Therefore the lining plate direction cannot be tumed down for installation.
- •On the lining plate,foam sealing adhesive tape is available and a water discharge is available under it.Therefore,no waterproof adhesive should be used on the lining plate edge.
- •The screws need to be tighened manually. Do not use an electric tool to tighten with strong force.
- •The lining plate must be compacted in tightening the screws.

There is no gap between the lining plate and wall.



