



安装说明书

1

备注

客户安装部件

客户安装部件

本纸

(与下水管连接)

已安装(专配)

此说明书采用了很多标志。标志的意思说明如下

此图表示不可行,「禁止」之意

▋ 表示必须「强制」实行的内容。

洗脸盆上不可有重物落下

请按照施工说明书正确安装

必须实行

(已经安装排水金具)

排水金具

产品尺寸(mm)

产品重量(KG)

连接排水管尺寸(T0T0提供)

3-1、沿着虚线剪下切割图、安装说明书。

3-2、洗面器排水金具与水管的连接。

最后把⑤. 螺母拧紧在排水金具上。

然后在④. 水管上依次放③. 橡胶平垫片、

1. 根据安装的龙头和台面尺寸, 正确切割龙头安装孔。

注意: (1) 安装图纸贴付在台面的位置请根据安装龙头 以及洗面器在台面上的位置自行决定。 (2) 建议台面上表面带地面的距离为820mm.

3. 等切割图纸干燥后,先用φ10的钻头打孔,然后切割出一个安装口,并修饰切割边缘

5. 用蝴蝶紧固夹,M6的弹垫,M6的大垫片,M6*60的螺栓各4个把洗面器和台板紧固。

M8平垫 M8弹垫

加至适当打长度

剥掉镀金

层后焊锡

排水件安装详图

<u>装饰压盖</u>

蝴蝶紧固夹

垫圈 一

橡皮密封圈 -

注意:1、水龙头进水口与进水管连接时,应保证进水管不扭曲,与螺母连接牢固。

②、安装完成后,用软布擦洗干净洗面器表面、水龙头及排水金具。

先把④. 水管穿过⑤. 螺母,

3-3、洗面器安装台面。

2. 将切割图纸贴付在台面上。

4. 把洗面器上放入已开好的孔。

6. 在洗面器和台板之间的间隙处打上硅胶

②、禁止使用环氧树脂胶。

3-4、进水件和排水件的安装(客户自备)

进水件安装详图

2、冷热进水管连接勿颠倒。

①、进水管和排水管连接要牢固。

注意: ①、间隙处要充满硅胶, 但是硅胶不能冒出

台面的开孔处如果冒出,请及时清理。

排水金具

蝴蝶紧固夹、M6弹垫、

不锈钢垫片、螺母、水管

固定部件 M6大垫圈、螺栓M6*60

连接部件 橡胶垫片A、橡胶垫片B、

请不要予与洗脸盆较强的力量和冲击力

注 意

否则会造成洗脸盆破损,导致洗脸盆漏水,而造成财产损失。

否则会造成洗脸盆破损,导致洗脸盆漏水,而造成财产损失

缓冲材、固定按钮等安装时、由洗脸盆上面向下安装时,要

或或

PJS02

600*400*120

注意: 洗面器的重量在实际生产中, 会出现偏差。规格中的产品重量是平均重量, 参考用。

#GW(高光)、#MW(亚光)

人造大理石、FRP等


配专用按启式排水金具

φ31.75(外径)

600*400*120

施工上的疏忽,可能由于漏水造成家庭财产污损。

铺上瓦楞纸、纸板等,以防洗脸盆破损。

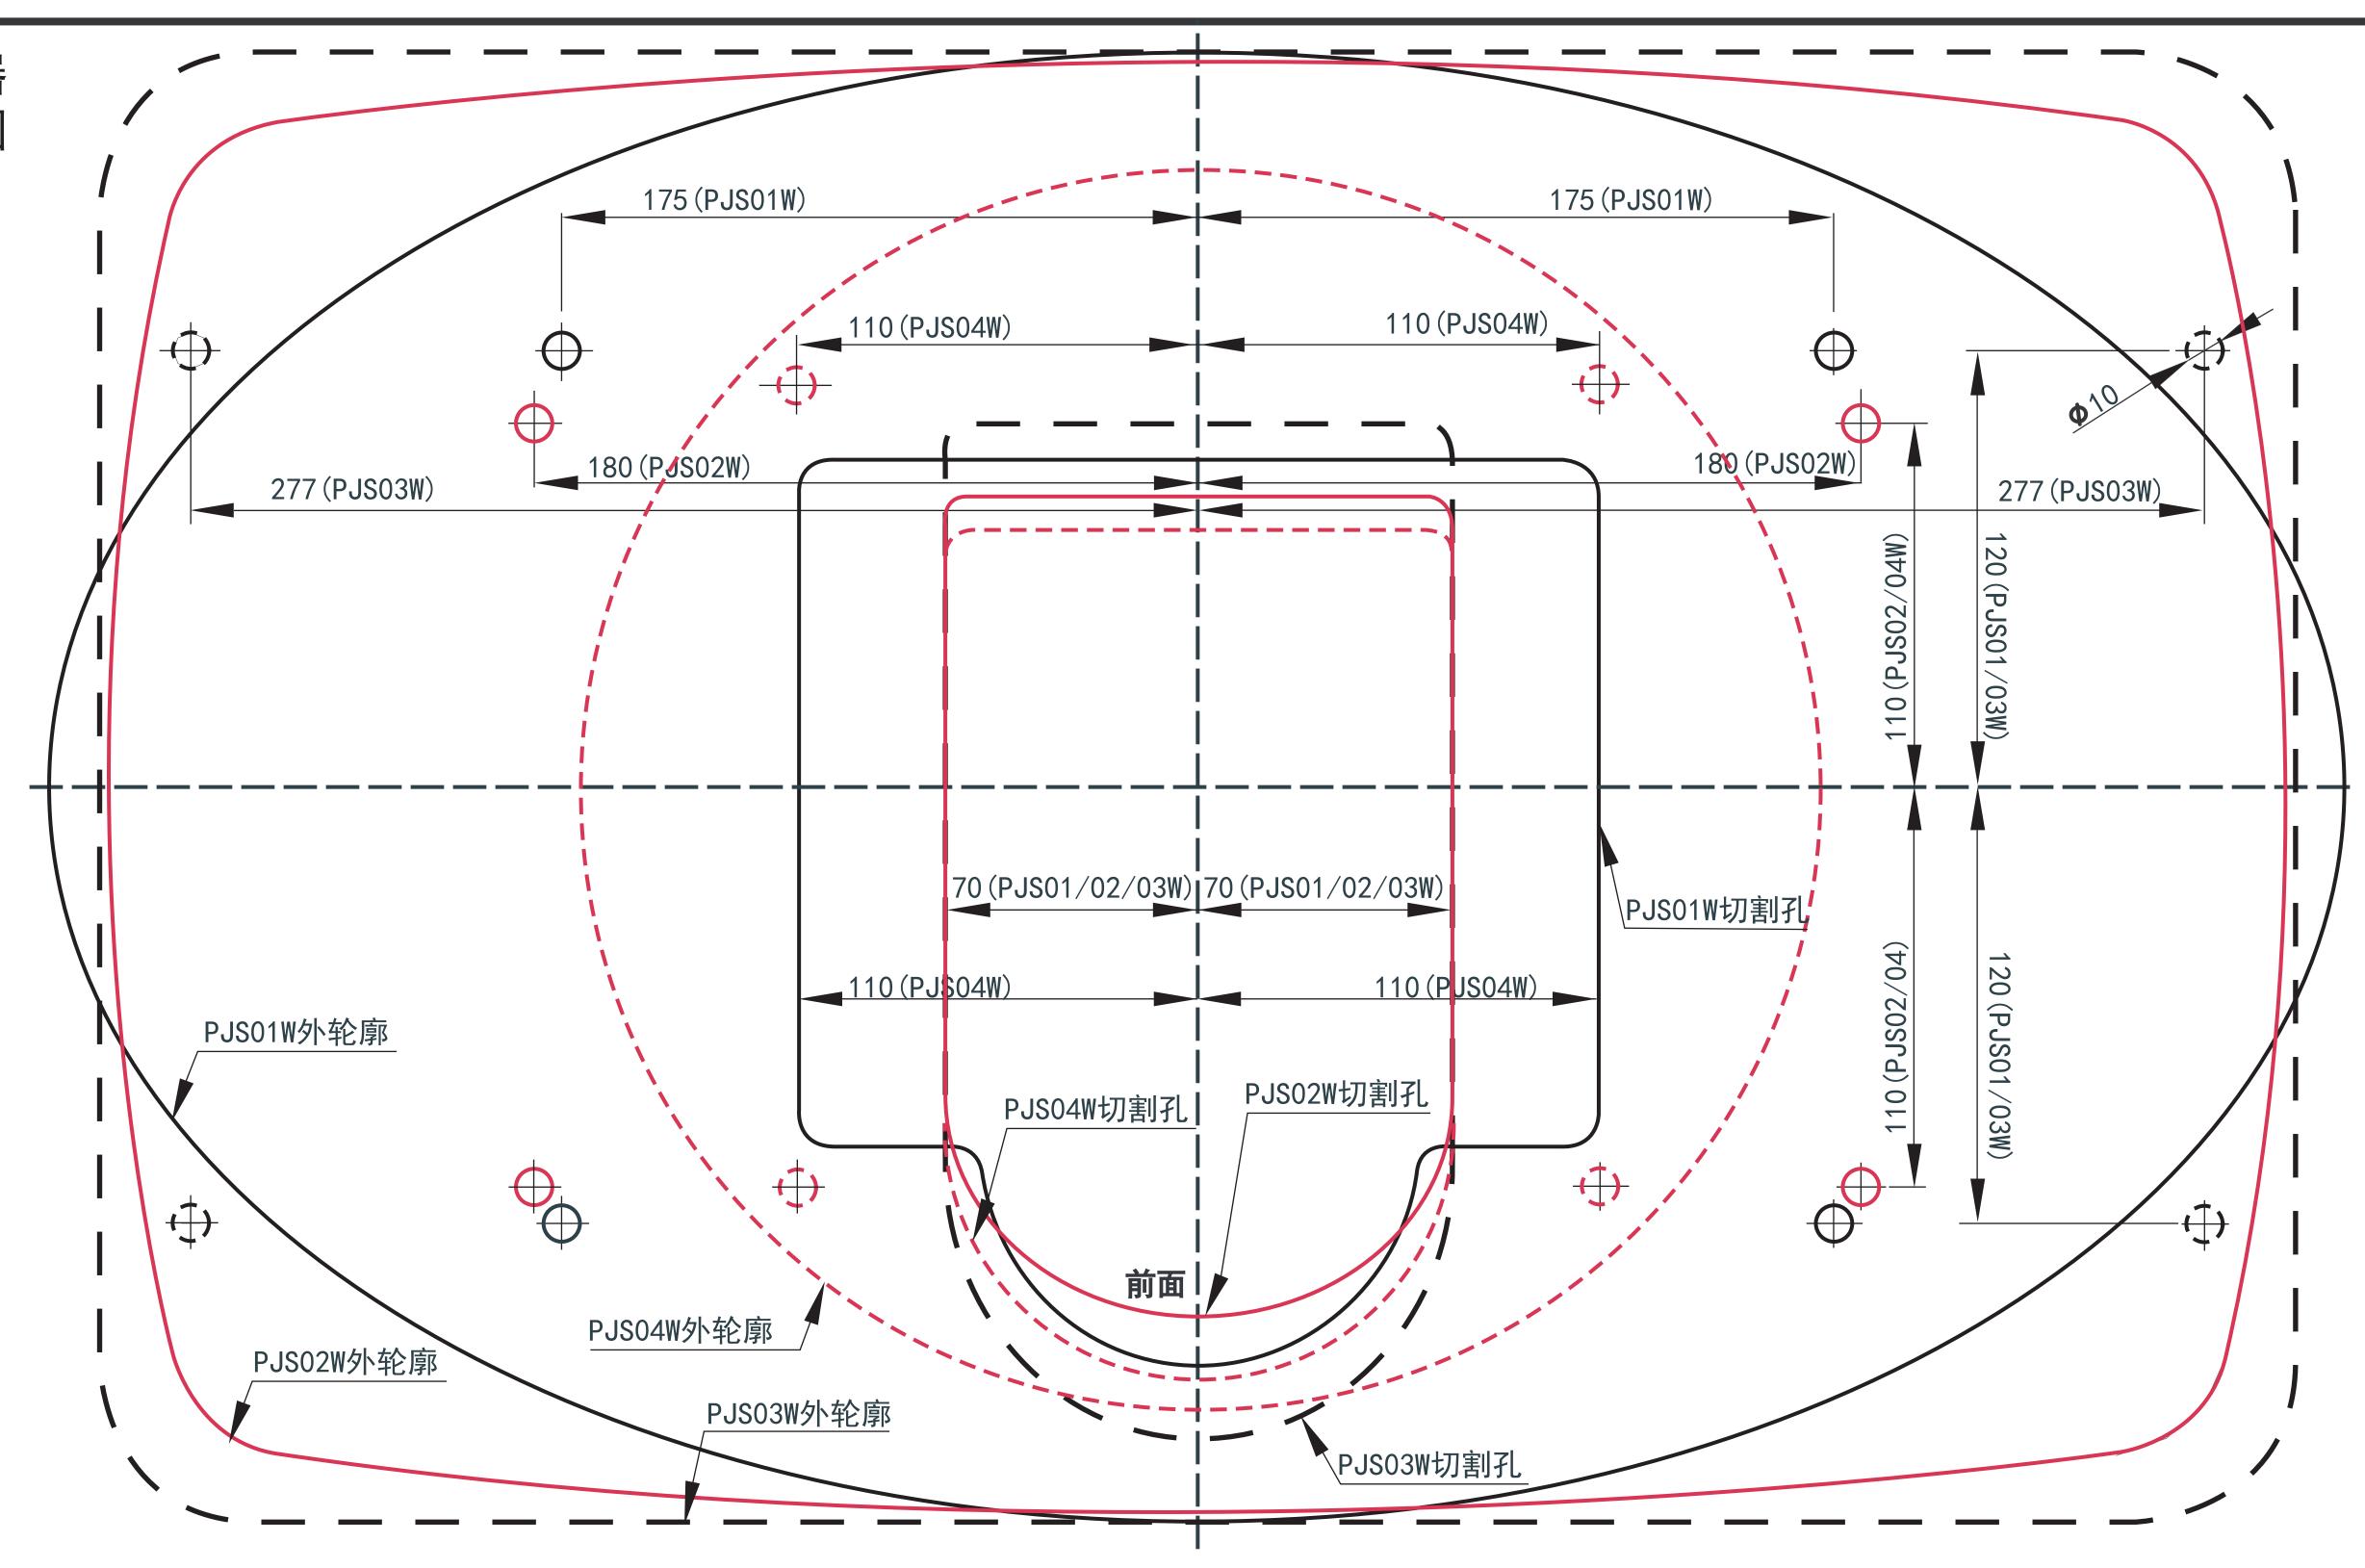



注意:纸张印刷过程中有误差,固定孔的位置,参考上图定位的同时,需要测量确认。

智能卫浴专家

谢您选择了

舒适到家----使世界上所有的人们,每天 生活在清洁、舒适的环境中。这是TOTO的 信念。无论从外观到内部构造都引导着时 代潮流,感谢您选择了我们。

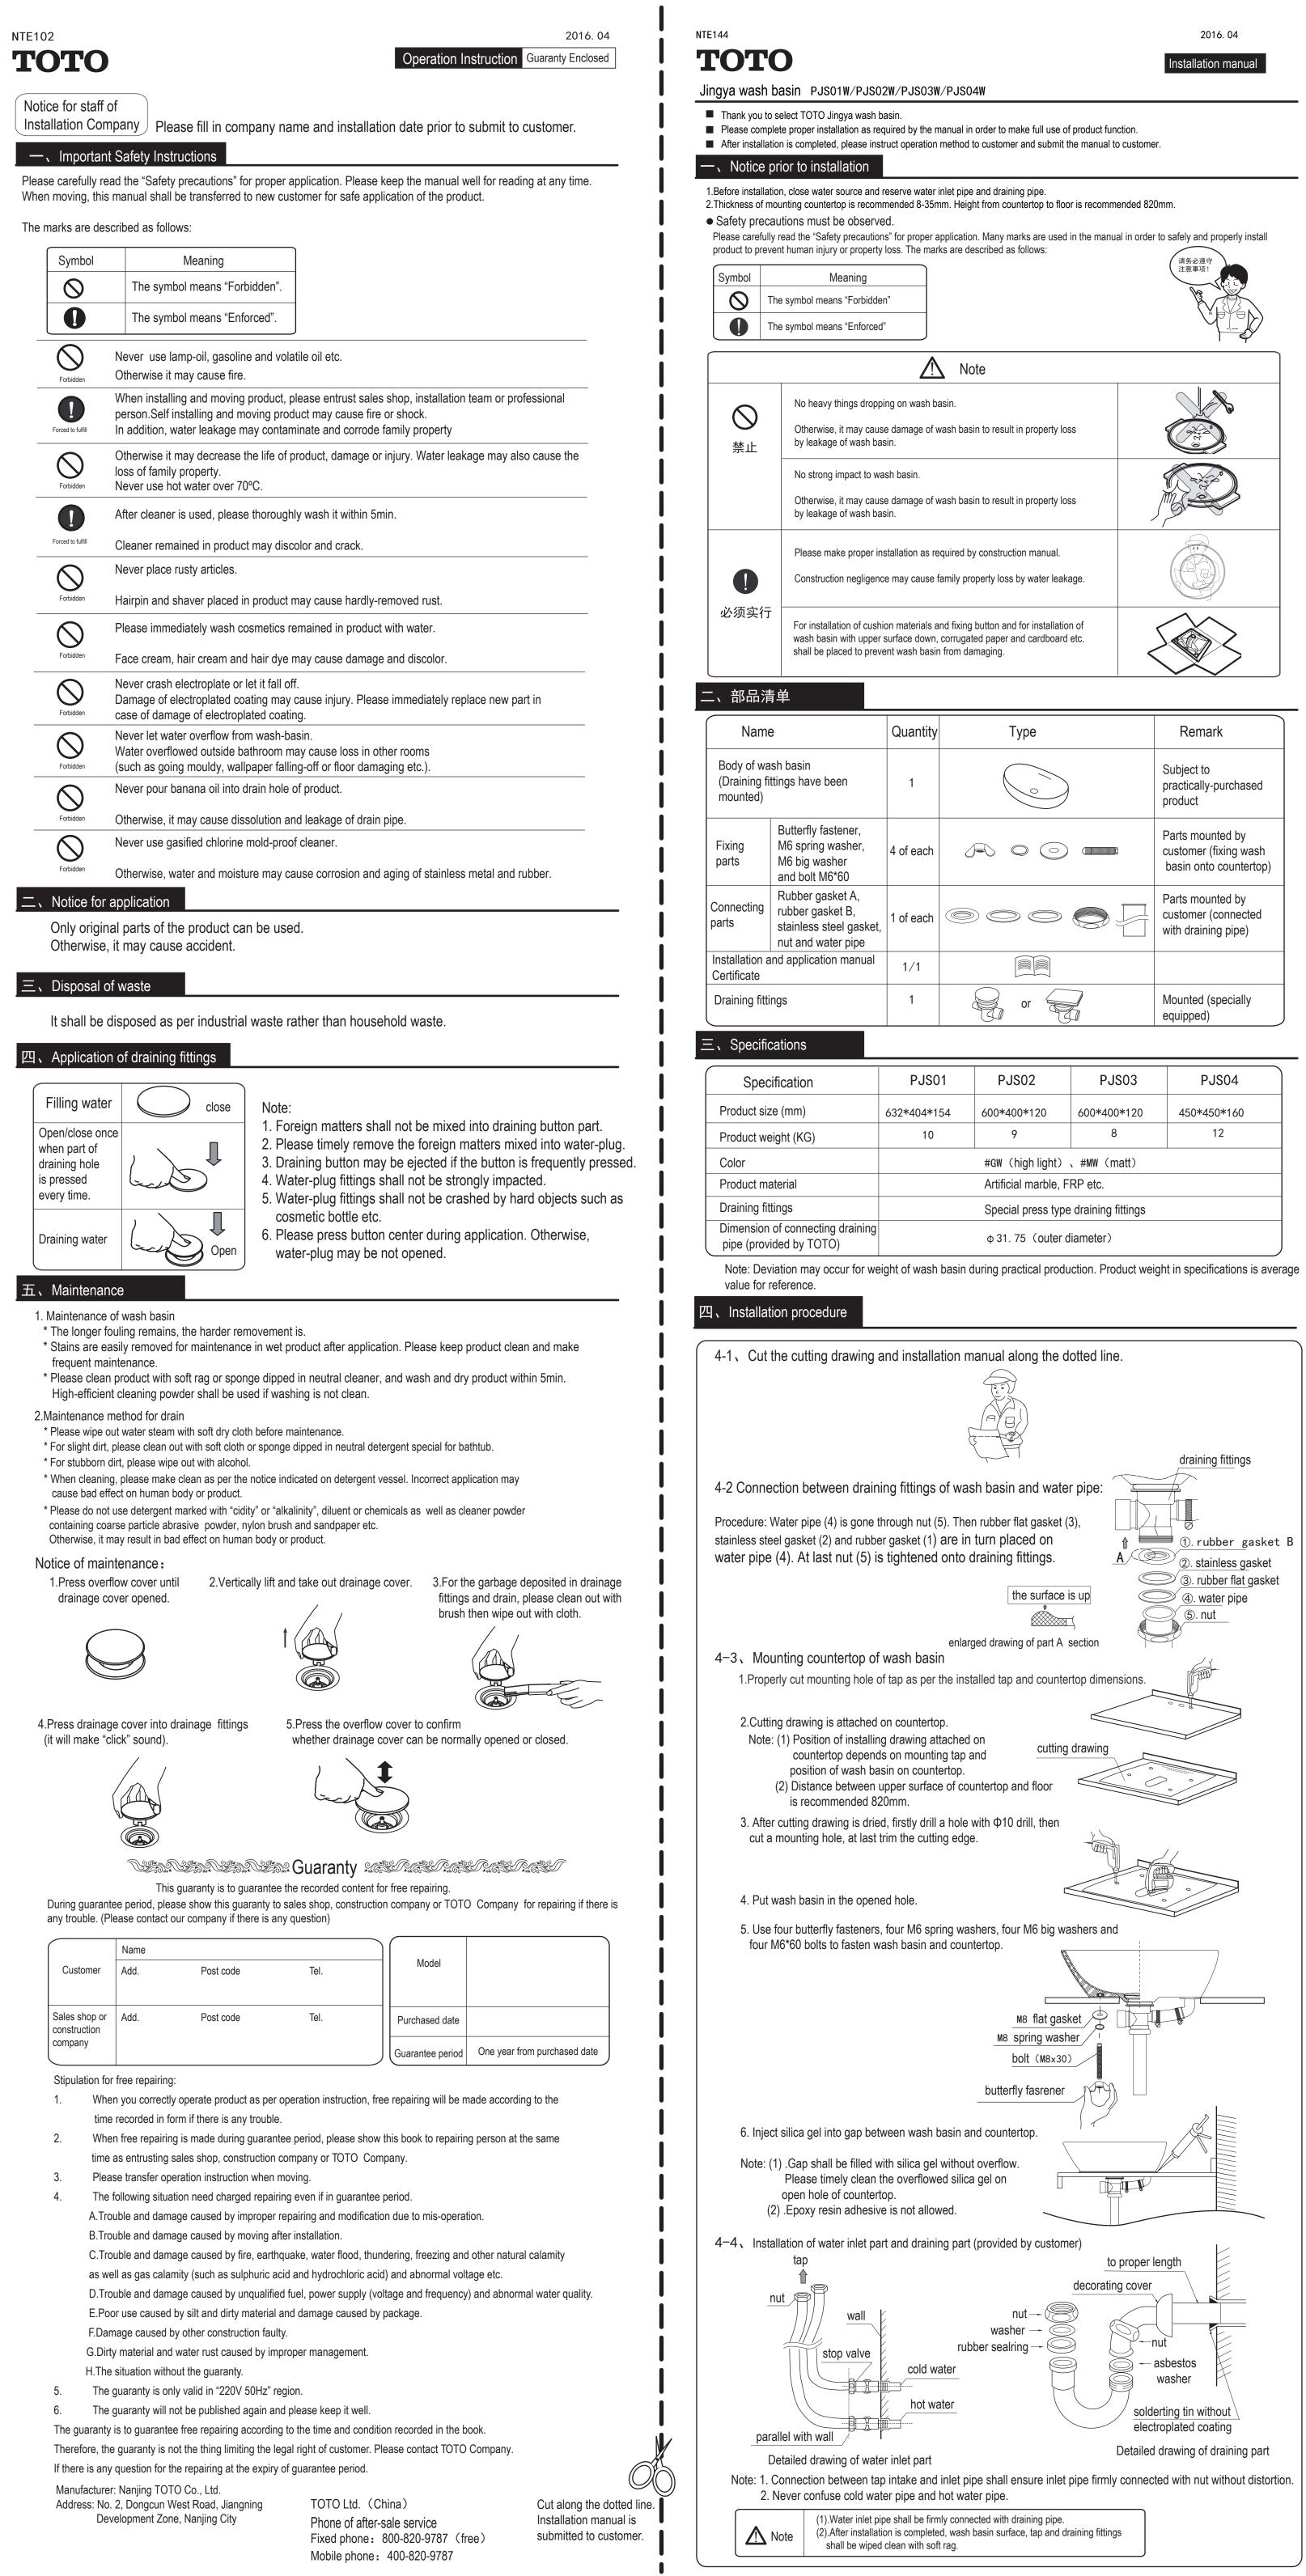

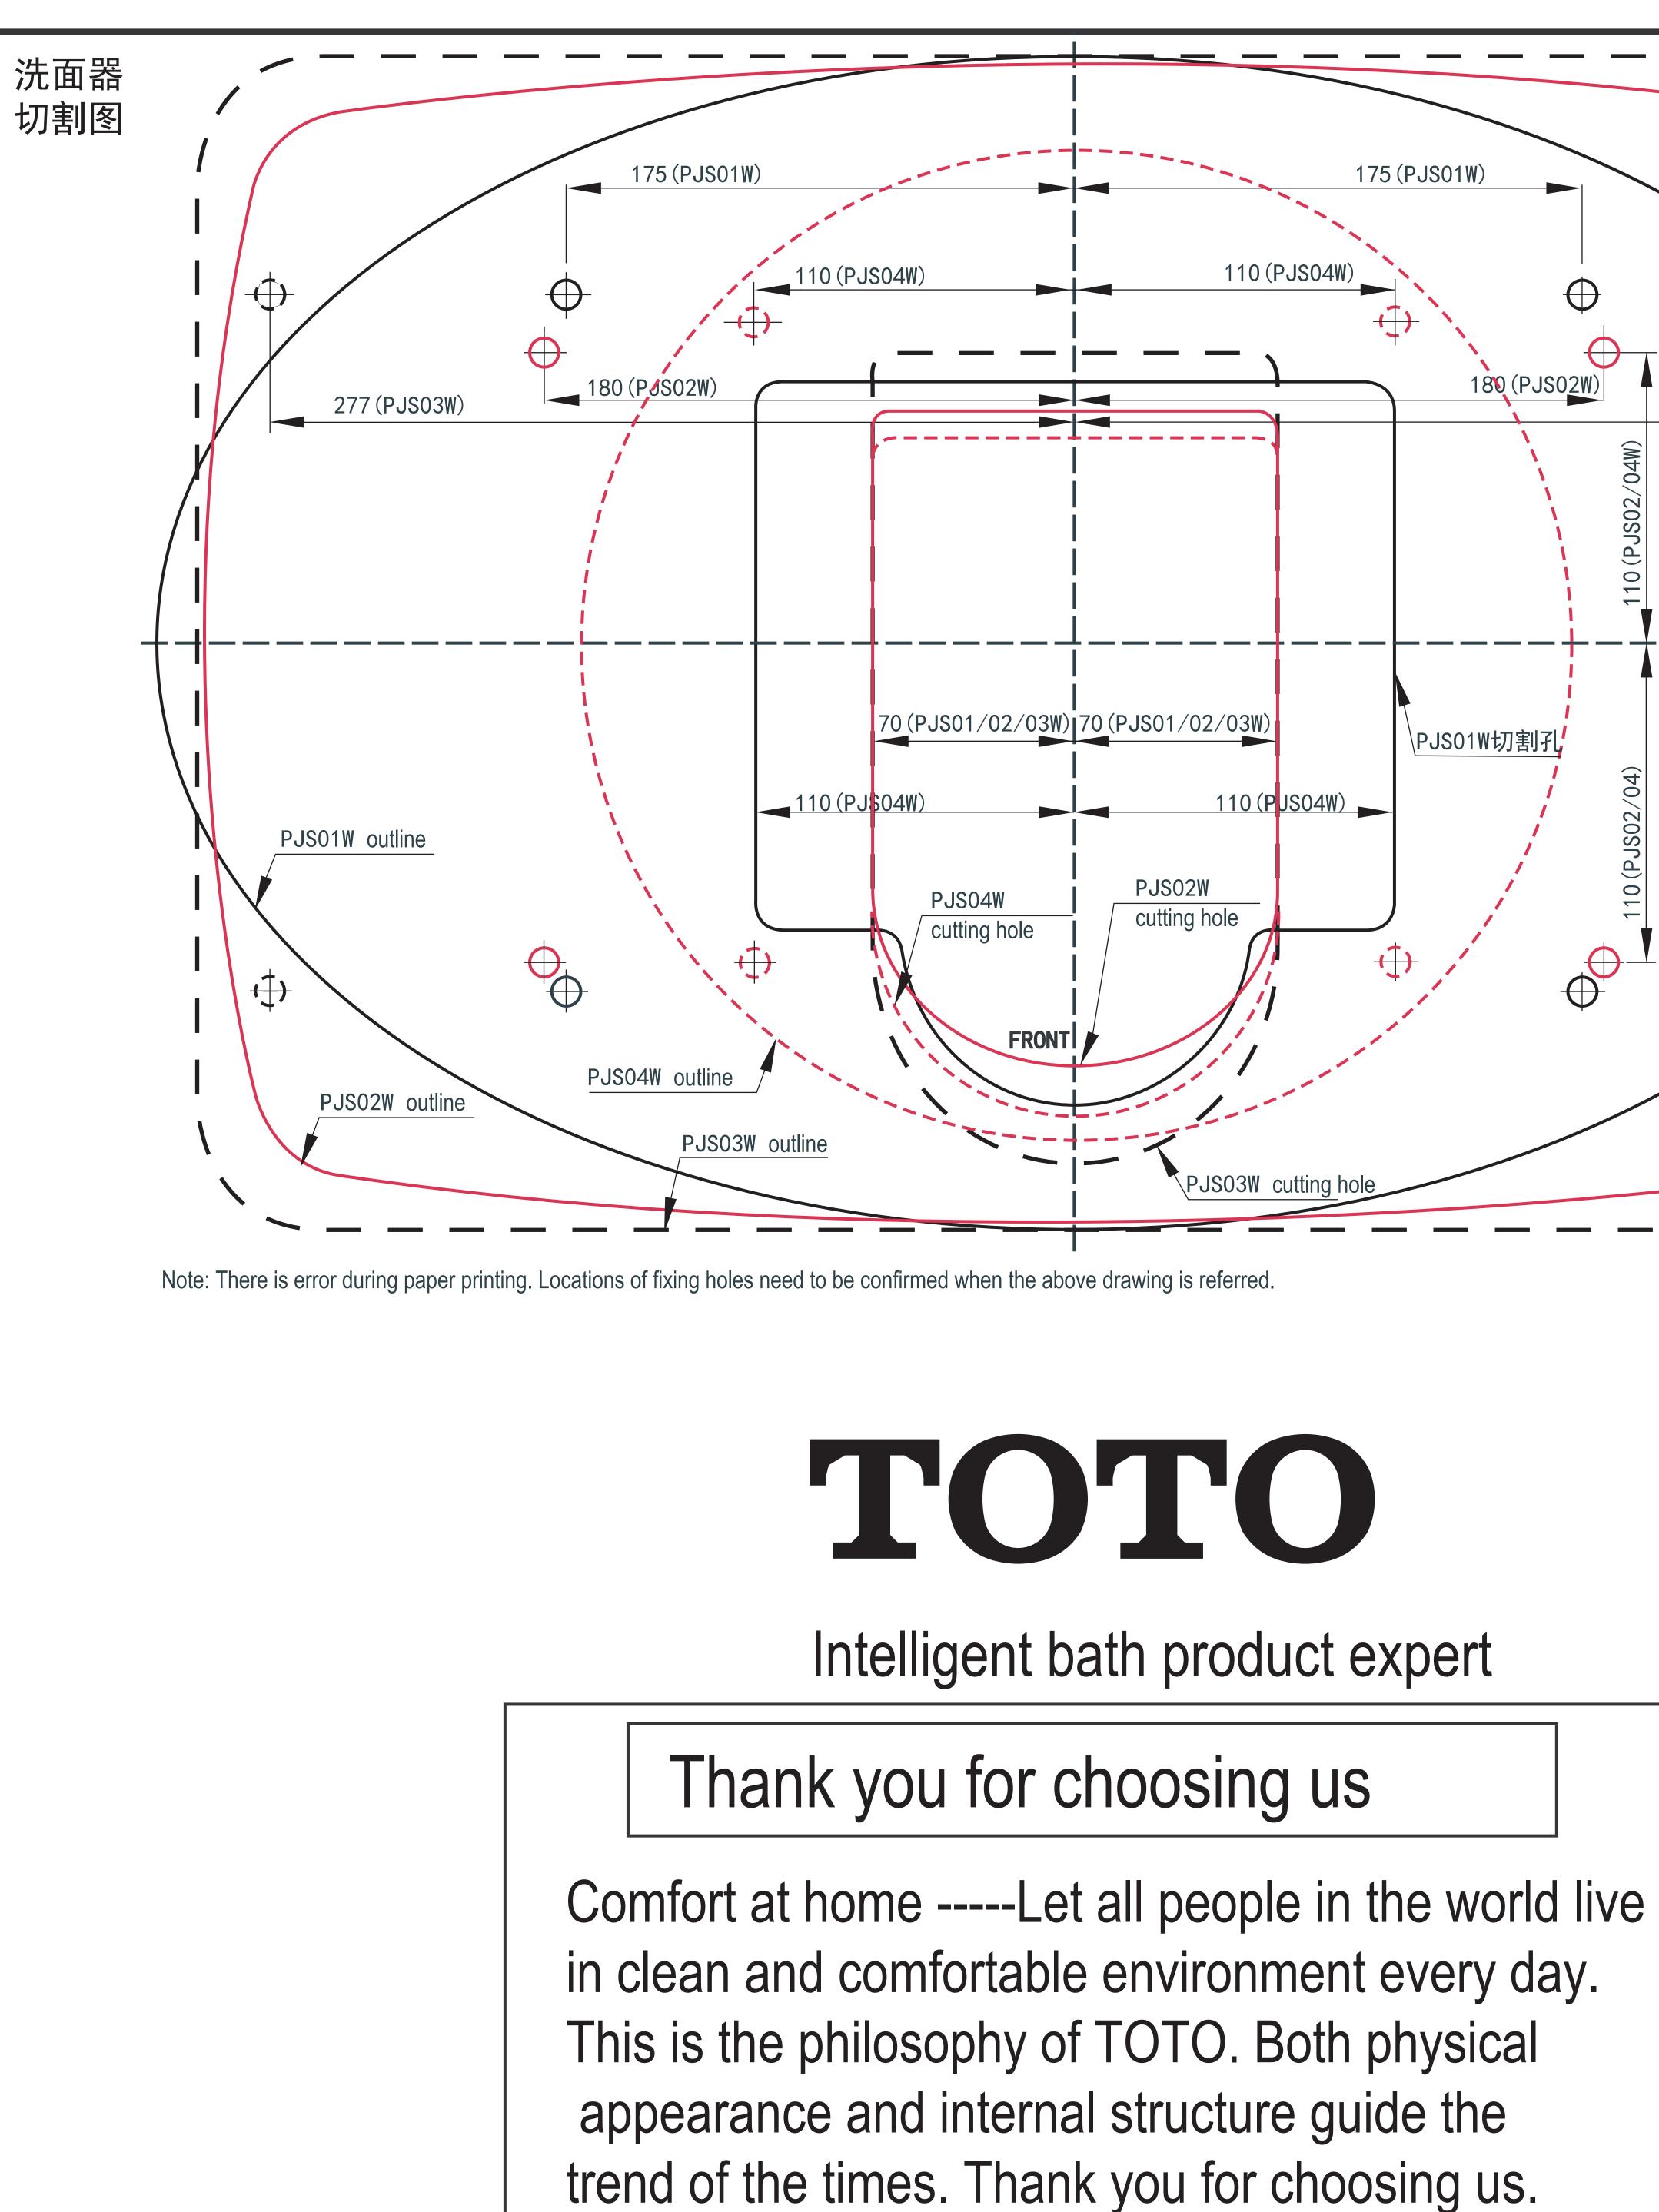

277 (PJS03W)

Cut along the dotted line. Installation manual is submitted to customer.

2016. 04

Remark

practically-purchased

Parts mounted by

Parts mounted by

with draining pipe)

Mounted (specially

PJS04

450*450*160

①. rubber gasket 「

③. rubber flat gasket

<u> 5. nut</u>

customer (fixing wash

basin onto countertop)

!\ Note

Otherwise, it may cause damage of wash basin to result in property loss

Otherwise, it may cause damage of wash basin to result in property loss

Please make proper installation as required by construction manual.

construction negligence may cause family property loss by water leakage.

For installation of cushion materials and fixing button and for installation of

wash basin with upper surface down, corrugated paper and cardboard etc.

Type

of each OOO

600*400*120

#GW (high light) , #MW (matt)

Special press type draining fittings

Artificial marble, FRP etc.

φ 31. 75 (outer diameter)

enlarged drawing of part A section

M8 spring washer

butterfly fasrener

rubber sealring -

bolt (M8x30)

electroplated coating

Detailed drawing of draining part

1. Properly cut mounting hole of tap as per the installed tap and countertop dimensions.

2. Cutting drawing is attached on countertop.

is recommended 820mm.

4. Put wash basin in the opened hole.

cut a mounting hole, at last trim the cutting edge.

Note: (1) Position of installing drawing attached on

position of wash basin on countertop.

countertop depends on mounting tap and

3. After cutting drawing is dried, firstly drill a hole with Φ10 drill, then

6. Inject silica gel into gap between wash basin and countertop.

Please timely clean the overflowed silica gel on

Note: (1) .Gap shall be filled with silica gel without overflow.

2. Never confuse cold water pipe and hot water pipe.

1). Water inlet pipe shall be firmly connected with draining pipe.

2). After installation is completed, wash basin surface, tap and draining fittings

open hole of countertop.

(2) Epoxy resin adhesive is not allowed.

(2) Distance between upper surface of countertop and floor

5. Use four butterfly fasteners, four M6 spring washers, four M6 big washers and

shall be placed to prevent wash basin from damaging.

632*404*154

No heavy things dropping on wash basin.

by leakage of wash basin.

by leakage of wash basin.

Name

M6 spring washer,

M6 big washer

and bolt M6*60

Rubber gasket A,

rubber gasket B,

nut and water pipe

Specification

No strong impact to wash basin.